


INSTRUCTIONS


Whenever possible, boxes must be located so that carrier's vehicle is off pavement when serving them.
Rural box number (or house number) must be painted on box in numerals not less than one inch high.
Post must be neat and of adequate strength and size.
Approach to box should be a hard level surface (gravel, cinders, stone).
Boxes must be placed to conform with state laws and highway regulations.

.....

Suggested installation of a single box.

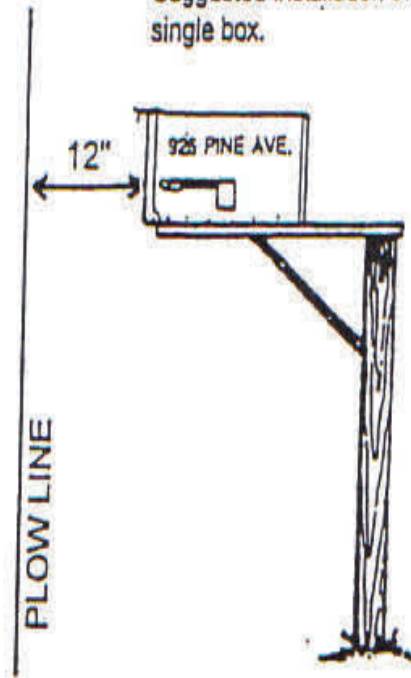

Suggested installation where snow removal is a problem.

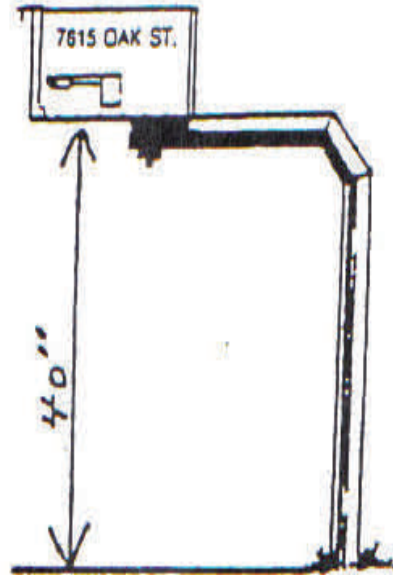

5 gal. pail, with 4 x 4 post, cemented in with quickrete - Portable - Good winter solution.



Extend box beyond end of post. Attach board holding box to post with screws or doublehead nails, permitting easy removal if necessary to adjust box height